

Caldura

Silent Mini Fridge

Operating Instructions

Introduction

Thank you for purchasing the Caldura Silent Mini Fridge.

The Caldura Silent Mini Fridge is a much needed breakthrough in the Mini Fridge market. The fridge is ideal for use in the Kitchen, office or bedroom as it is totally silent in operation and emits no harmful odours or gases.

This manual explains how to install and use the Silent Mini Fridge, and also contains some important safety advice. Please read it carefully before using the product.

Installation

Before use, please carry out the following installation procedure:

Clean the interior of the unit with lukewarm water using a soft damp cloth. Place the unit on a level surface which is capable of supporting the unit when fully loaded.

The unit should be located in a cool, dry place at least 5cm from any walls and away from direct sunlight.

The unit should be installed in a place where the ambient temperature is within the range 10 to 25°C. If the ambient temperature is outside of this range, the performance of the unit may be affected.

If the unit has been transported, tipped up, or disturbed in any other significant way, it should be allowed to stand upright for **at least two hours** before being connected to the mains. The unit is cooled by a liquid, and this needs to have time to fully settle before the unit can function effectively.

Connect the unit to a standard 13 amp earthed electrical power outlet using the power cord provided.

Safety Instructions

In order to avoid electric shock, do not open the casing of the Silent Mini Fridge. There are no user serviceable parts inside and any problems should be reported to your supplier.

Never obstruct the air vents.

DANGER - Risk of child entrapment - surplus refrigeration appliances are dangerous, even if they "just sit in the garage for a few days." Before you throw away your old refrigeration appliance, please take off the door and leave the shelves inside so that children may not easily climb inside.

Never allow children to operate, play with, or crawl inside the Silent Mini Fridge.

Never clean the unit with flammable liquids, the fumes can create a fire hazard or explosion.

Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this unit or any other electrical appliance. The fumes can create a fire hazard or explosion.

If your model is fitted with a glass door (Silent Mini Bar), do not store food or other perishables in the unit, the temperature inside may not get cold enough to prevent spoilage.

The unit is supplied fitted with a standard UK 13 amp plug, if the power cord becomes damaged; have it replaced by a qualified electrician. Proper earthing of the unit is essential for your safety. Any excess cord should be secured behind the unit and not left exposed or dangling to prevent accidental injury.

Operation

Set the thermostat dial inside the fridge to its mid position.

After 1 hour, the rear of the unit should become warm to the touch, this indicates normal operation. The unit should reach the correct operating temperature within approximately 3 hours. You may wish to use a thermometer and adjust the thermostat dial as necessary.

Normal fridge temperature is 5°C plus or minus 3°C (i.e. between 2 and 8°C). You should set the thermostat such that the unit runs within this range.

Please note that, depending upon ambient conditions, the glass door model (Silent Mini Bar) may not reach normal fridge temperature. For this reason, it is not recommended to store perishable items in the glass door model.

Cleaning and Maintenance

Condensation may collect inside the Mini Fridge under certain weather conditions and this is quite normal. You should remove this with a dry cloth. Before cleaning the unit, unplug it and remove all the contents and shelves. Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a litre of water. The outside of the unit should be cleaned with mild detergent and warm water. The fridge will need periodic defrosting. When ice builds up on the cooling element inside the fridge, disconnect the fridge from the mains supply and allow to defrost with the door open taking care to remove any water that may build up inside. When defrosting is complete, ensure the inside of the fridge is dry and re-connect to the mains supply. Ice must never be removed by force as this may damage the fridge.

If the fridge is not going to be used for a long period of time it should be disconnected from the mains supply, cleaned, dried and the door should be left open to prevent the build up of smells inside.

Warranty

The Silent Mini Fridge carries a full 12 month warranty which covers faults due to workmanship or materials but not accidental damage.

In the event of any warranty query, please contact the retailer you bought the unit from. You will require proof of purchase in order to claim against the 12 month warranty.

Technical Data

Model	SF30WT/BK	SF30BKG	SF40WT/BK	SF40BKG
Voltage	220-240V 50-60Hz			
Max input power	65W			75W
Average power consumption	0.8KWh/24h			0.9KWh/24h
Temperature Range	3-10°C	8-15°C	3-10°C	8-15°C
Capacity	30 litres (1 cubic feet)		40 litres (1.4 cubic feet)	
Net Weight	14Kg	16Kg	15.5Kg	18Kg
Dimensions	40 x 49 x 42cm (w x h x d)		40 x 55 x 44cm (w x h x d)	

